

INSTRUCTIONS FOR USE



Link Wireless Telephone
(Model PTB450 shown)

- Turn on** Press the **PWR** key for about one second. You will hear a double chirp. Your extension will display. The **NO SVC** message will display briefly. When it goes out, you are ready to make and receive calls.
- Place a call** Press the **START** key, wait for dial tone, then dial the number. Dial calls with the Wireless Telephone exactly as with your desk phone. Your telephone system may require you to select a line by pressing the **LINE** key, followed by a line number.
- Answer call** The Wireless Telephone will ring or vibrate to alert you. Additionally, a line indicator on the display may flash, and the display may show information about the call, such as caller's name and extension. To answer a call, press the **START** key and hold the earpiece to your ear.
- If you are on a call and hear subdued ringing, a call is coming in on a second line. To answer this call, put your first call on hold and press the line key then the line number of the second call.
- Put call on hold** Press **HOLD**.
- Mute/unmute microphone** To mute the microphone so you can hear but won't be heard, press **FCN** then press **1**. **MUTED** appears on the Wireless Telephone display. Press **FCN** then **1** again to restore voice pickup.
- Adjust volume during call** Press **VOL** while you are in a call to toggle between high and low volume.
- Hang up** Press **END**. Do not use the **PWR** key to end a call, because that will turn your Wireless Telephone off and you will not receive calls until you turn the Wireless Telephone back on.
- Turn off** Press the **PWR** key for about one second. You will hear a single chirp. If you accidentally turn your Wireless Telephone off during a conversation, you can restore your conversation by pressing the **PWR** key and then the **START** key, provided the person you are talking to has not hung up.

Using the headset To hear ringing through a headset, the ring type must be set to **SOFT**. To answer a call when your headset is plugged in, press any key except **PWR** or **END**.

The volume level can be adjusted separately for headset use. Plug the headset in and press **FCN** until **VOLUME** displays. Use the keypad to enter a volume level from **1** (softest) to **8** (highest). This sets the low volume. High volume is automatically set two levels higher than low volume. Toggle between high and low volume by pressing the **VOL** key while in a call.

Access system features To access the features of your telephone system from the Wireless Telephone, press **FCN** anytime while in a call to display a menu of available features. Press the key(s) for the desired feature, or press **FCN** again to display more options. Select **EXIT MENUS** to exit.

If your telephone system supports softkeys, pressing **FCN** provides access to softkey functions. You will need to press **FCN** twice to display the feature menu.

Because softkey and system features vary, your system administrator will explain them for your telephone system.

Setting User Preferences

Standby menu When the Wireless Telephone is on but not in use, press and briefly hold **FCN** to display menus. Check with your system administrator for specific features supported by your Wireless Telephone.

- Navigation**
- # >** to display next menu item.
 - < *** to display previous menu item.
 - 0** to select or change item.
 - FCN** to return to previous menu level.
 - END** to exit menus.

Volume Level The Wireless Telephone has two volume levels, low and high. Set the low volume level by pressing **FCN** until **VOLUME** displays. Use keypad to select a level from **1** (softest) to **8** (loudest). This sets the low volume. High volume is automatically set two levels higher than low volume.

Ring Type Select **Telephone Ring** to set the standard ring on the Wireless Telephone. **Normal** is factory default. **Vibrator Ring** works only if your Wireless Telephone has the optional vibrating ringer. **Auxiliary Ring** is used only by external applications. Press **0** to select desired ring type. The ring type currently set displays with an asterisk (*).

High Noise Mode Adjusts the Wireless Telephone to account for background noise. Select an option that describes the noise in your environment.

Extension Sets extension number associated with your Wireless Telephone. Use keypad to enter extension number.

Backlight Comes on when any key is pressed. Turns off after ten seconds if no key is pressed. (Model PTB450 only)

Language Sets the default language for Wireless Telephone menus. Select the language to be used with your Wireless Telephone.

Battery Packs

About Battery Packs

The Wireless Telephone will need to have its Battery Pack recharged periodically. The Nickel Metal Hydride (NiMH) rechargeable Wireless Telephone Battery Pack gives you four hours of talk time or 80 hours of stand-by time. Stand-by time is when the Wireless Telephone is turned on, but you are not using it.

Indications of a low Battery Pack

The Wireless Telephone also supports a Nickel-Cadmium (NiCd) Battery Pack, which supports two hours talk time and 40 hours stand-by. The Wireless Telephone will notify you when the charge on the Battery Pack becomes low. If the Wireless Telephone is in use, the **BATT** message will display and you will hear a soft beep through the earpiece every six seconds. You have two minutes to complete the call or change the battery.

The Battery Pack can be changed while the call is still in progress. Do not press **END**. Quickly remove the discharged Battery Pack and replace with a charged Battery Pack, press **PWR**, and then press **START** to resume the call in progress.

If the Wireless Telephone is idle, you will hear a brief modulated ring signal and the **Low Battery** message will display. Your Wireless Telephone will not operate until you replace or charge the Battery Pack.

Removal and replacement of the Battery Pack

To remove the Battery Pack, press down on the oval button on the back of the Wireless Telephone. Slide the Battery Pack toward the bottom of the Wireless Telephone until it stops, then lift up.

To replace the Battery Pack, first properly align the top of the Battery Pack with the arrows on the label on the back of the Wireless Telephone. Gently press and slide the Battery Pack toward the top of the Wireless Telephone until it snaps into place. You should not have to force it against the Wireless Telephone.

Take care not to short the battery contacts on the Battery Pack with metal objects such as coins, keys or paper clips. Shorting the contacts can cause permanent damage.

Status/Tone Indicators

NO SVC

The Wireless Telephone cannot receive or place calls. You may be outside of the coverage area. Walk back into the covered area.

BATT

Your Battery Pack charge is low. You will also hear a beep in the earpiece. Your Battery Pack needs to be recharged.

MSG

You have a voicemail message.

NOTE

- Changes or modifications not expressly approved by SpectraLink could void the user's authority to operate the equipment.
- It is recommended that standard acceptance procedures be followed prior to operating this equipment in proximity of life-support systems.
- To minimize risk of interference, pacemaker users should not carry the Wireless Telephone next to the pacemaker.
- Earpiece may retain magnetic objects.
- Operation of the Wireless Telephone may produce an audible noise noticeable to hearing aid users. It is recommended that a hearing aid compatible headset be used by hearing aid users.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For more information about SpectraLink Wireless Telephones and accessories, visit our website at http://www.spectralink.com/service/manuals_link.html

© 2005 SpectraLink Corporation
P/N 72-0035-01-1
Model # PTB400, PTB410, PTB450

SpectraLink Corporation
5755 Central Avenue
Boulder, CO 80301
303.440.5330 or 800.676.5465
www.spectralink.com

Link Wireless Telephone

SpectraLink

