


Spectralink 6020 Wireless Telephone

Model Numbers

Handset models: 602X

Charger models: PCS1850, PCD1850, PCQ1850

Battery Pack models: PBP0850, PBP1300, PBP1850

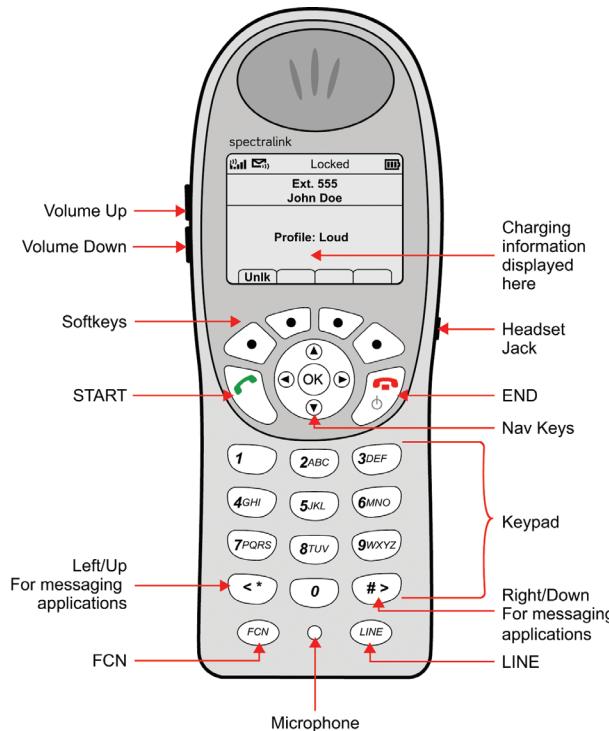

Contact Information

Spectralink Corporation

US Location

800-775-5330

2560 55th Street

Boulder, CO 80301

info@spectralink.com

Denmark Location

+45 7560 2850

Spectralink Europe ApS

Langmarksvej 34

8700 Horsens

infodk@spectralink.com



Spectralink® 6020 Wireless Telephones Quick Start Guide



Copyright Notice

© 2006-2013 Spectralink Corporation All rights reserved. Spectralink™, the Spectralink logo and the names and marks associated with Spectralink's products are trademarks and/or service marks of Spectralink Corporation and are common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Spectralink.

All rights reserved under the International and pan-American Copyright Conventions. No part of this manual, or the software described herein, may be reproduced or transmitted in any form or by any means, or translated into another language or format, in whole or in part, without the express written permission of Spectralink Corporation.

Do not remove (or allow any third party to remove) any product identification, copyright or other notices.


Notice

Spectralink Corporation has prepared this document for use by Spectralink personnel and customers. The drawings and specifications contained herein are the property of Spectralink and shall be neither reproduced in whole or in part without the prior written approval of Spectralink, nor be implied to grant any license to make, use, or sell equipment manufactured in accordance herewith.

Spectralink reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Spectralink to determine whether any such changes have been made.

NO REPRESENTATION OR OTHER AFFIRMATION OF FACT CONTAINED IN THIS DOCUMENT INCLUDING BUT NOT LIMITED TO STATEMENTS REGARDING CAPACITY, RESPONSE-TIME PERFORMANCE, SUITABILITY FOR USE, OR PERFORMANCE OF PRODUCTS DESCRIBED HEREIN SHALL BE DEEMED TO BE A WARRANTY BY SPECTRALINK FOR ANY PURPOSE, OR GIVE RISE TO ANY LIABILITY OF SPECTRALINK WHATSOEVER.

If you want to	Then
Turn handset on	Press and hold the END key until two chirps sound.
Turn handset off	Press and hold the END key. One chirp will sound. If you are in a call, hang up first, then turn off the handset.
Unlock keypad	Press the Unlk softkey, then #, to unlock the keypad.
Lock keypad	Press the Cfg softkey then NavOK , to manually lock the keypad. See the Config Menu to activate or deactivate Autolock.*
Make an internal call	Press the START key, wait for dial tone, then dial the extension.
Make an external call	Press the START key, wait for dial tone, then dial the number just as you would from your desk phone.
Select line	Press LINE and the number key corresponding to the desired line.
Dial number	Press the number keys.
Answer call	The handset will ring or vibrate to alert you of an incoming call. Additionally, a line indicator on the display may flash and the display may show information about the call, such as caller's name and extension. To answer a call, press the START key and hold the earpiece to your ear. You may also activate the speakerphone function or use a headset.
Answer call on second line	If you are on a call and hear subdued ringing, a call is coming in on a second line. The line number on the display may be flashing. To answer this call, put your first call on hold and press the LINE key, then the line number of the second call.
Mute microphone	Press the Mute softkey.
Place call on hold	Press the Hold softkey.
Hang up	Press the END key. Be sure to do this at the end of each call to return to the standby mode.
Change speaker volume	Press the up/down volume buttons on the side of the handset during the call.
Change ring volume	Press the up/down volume buttons on the side of the handset during ringing. The default ring volumes are set in the User Profile menus.*
Silence while ringing	Press the END key to silence the ring.
Activate speakerphone	Press the Spkr softkey and speak towards the handset. Note that this feature may be unavailable in your facility.
Headset answer	Press any key (other than END) to answer a call when a headset is plugged-in.

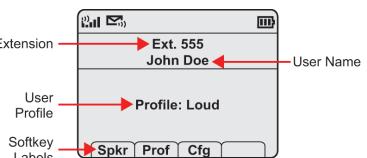If you want to	Then
Headset volume	Press the up/down volume buttons on the side of the handset during the call.
Change profile	Press the Prof softkey and use the Nav keys to select a new profile while in standby mode.*
Backlight	The backlight comes on when any key is pressed or when there is an incoming call and stays on for 10 seconds. It turns off after 10 seconds if another key is not pressed within that period.
 <p>Standby Mode Display</p> <p>Extension: Ext. 555 User Name: John Doe User Profile: Profile: Loud Softkey Labels: Spkr, Prof, Cfg</p>	
* Please see the Spectralink 6020 Wireless Telephone and Accessories User Guide for more information.	
Français	
Si Vous Voulez	Vous Devez
Mettre en marche le combiné	Appuyer et tenir END jusqu'à ce que vous entendiez deux sifflements.
Mettre le combiné hors tension	Appuyer et tenir END . Un sifflement se fera entendre. Pendant un appel, terminez-le et ensuite mettre hors tension.
Déverrouiller le clavier	Appuyer sur la touche programmable Unlk , puis sur # pour déverrouiller le clavier.
Verrouiller le clavier	Appuyer sur la touche programmable Cfg puis sur NavOK , pour verrouiller manuellement le clavier. Se référer à The Config Menu pour activer ou désactiver Autolock.*
Faire un appel interne	Appuyer sur START , attendre le signal sonore et composer le numéro du poste désiré.*
Faire un appel externe	Appuyer sur la touche START , attendre le signal sonore et composer le numéro comme vous le feriez sur votre téléphone.
Choisir une ligne	Appuyer sur LINE et sur la touche du numéro correspondant à la ligne désirée.
Composer un numéro	Appuyer sur les touches numérotées.

Si Vous Voulez	Vous Devez
Répondre à un appel	Le combiné sonnera ou vibrera pour vous avertir d'un appel. En plus, un indicateur sur votre afficheur clignotera et l'afficheur vous donnera les informations au sujet de l'appel, tels que le nom et le numéro du poste.
Pour répondre à l'appel appuyez sur START et placer l'écouteur à votre oreille. Vous pouvez également activer le mains-libres ou vous servir d'un micro-casque.	
Répondre à un appel sur une deuxième ligne	Si vous répondez déjà à un appel et que vous entendez une sonnerie discrète, vous avez un deuxième appel. Pour répondre à cet appel vous devrez Premièrement mettre votre premier appel en attente et appuyer et tenir la touche LINE puis sur la ligne du deuxième appel.
Mute le microphone	Appuyer sur la touche programmable Mute .
Mettre un appel en attente	Appuyer sur la touche programmable Hold .
Revenir à l'appel en attente	Appuyer sur la touche LINE suivi de la touche du numéro en attente. chaque appel pour retourner en mode d'attente.
Ajuster le volume	Appuyer sur les touches de volume sur le côté du combiné pendant l'appel.
Ajuster le volume de la sonnerie	Appuyer sur les touches de volume sur le côté du combiné pendant un appel. Les volumes de sonnerie se retrouvent dans le menu du User Profile .
Tailler la sonnerie	Appuyer sur la touche END pour tailler la sonnerie.
Activer le mains-libres	Appuyer sur la touche Spkr et parler en direction du combiné. Veuillez noter que ce service n'est pas disponible à tous.
Répondre avec le micro-casque	Appuyer sur n'importe quelle touche (à l'exception de END , d'une touche Nav , ou d'une touche programmable) pour répondre à un appel lorsque le micro-casque est branché.
Ajuster le volume du micro-casque	Appuyer sur les touches de volume sur le côté du combiné pendant l'appel.
Changer le profil	Appuyer sur la touche programmable Prof et vous servir des touches Nav pour sélectionner un nouveau profil lorsque vous serez en mode d'attente.
Rétroéclairage	Le rétroéclairage entre en fonction dès qu'on appuie sur une touche ou lorsque l'on reçoit un appel et il restera en fonction pendant dix secondes. Après ce laps de temps si aucune autre touche n'est activée il s'éteindra.